


MULTI-PURPOSE HAND PUMP

Model 90300

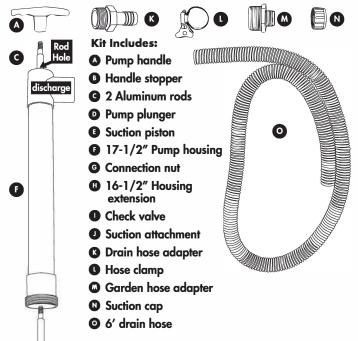

36" Assembly Instructions:

- 1. Thread 2 aluminum rods (C) together.
- 2. Attach pump handle (A) to aluminum rods (C).
- 3. Insert rod through pump housing (F) rod hole.
- 4. Slide handle stopper (B) onto aluminum rods (C).

- 5. Thread pump plunger (D) into aluminum rods (C).
- 6. Slide connection nut (G) onto housing extension (H).
- 7. Connect pump housing (F) to housing extension (H).
- 8. Tighten connection nut (G).
- 9. Thread check valve (I) onto housing extension (H).
- 10. Thread drain hose adapter (K) or garden hose adapter (M) into pump housing (F) discharge.
- 11. Attach 6' drain hose (O) & hose clamp (L) or garden hose (sold separately).



0

0

Water Pump Operation:

Place check valve into water source. While holding pump, pull up & down on pump handle. Water will pump up & out of discharge.



36" Extractor Pump:

- 5. Thread suction piston (E) into aluminum rods (C).
- 6. Slide connection nut (G) onto extension pipe (H).
- 7. Connect pump housing (F) to housing extension (H).
- 8. Tighten connection nut (G).
- 9. Thread suction attachment (J) onto extension pipe (H).
- 10. Thread garden hose adapter (M) into pump housing (F) discharge & thread on suction cap (N).

Extractor Pump Operation:

Place suction attachment into water source. While holding pump, pull up on pump handle to fill pump. Remove from water source & push down on pump handle to discharge water from pump.



18" Water Pump / Extractor Pump:

- 1. Follow all steps to assemble 36" hand pump.
- Remove housing extension (H) & remove adapter.
- 3. Push rod assembly up & through pump housing (F).
- 4. Remove upper rod (C) & pump handle (A).
- 5. Reattach handle (A) to lower rod (C) & attach a adapter to pump housing (F).

CUSTOMER SUPPORT: 1-800-495-9278

⚠WARNING: This unit is NOT built to pump corrosives or flammable liquids. Doing so can cause harm and/or personal injury. It will also void the warranty.