




***INSTALLATION & OPERATION  
MANUAL  
CAST IRON TRANSFER PUMP  
Model:  
90060***

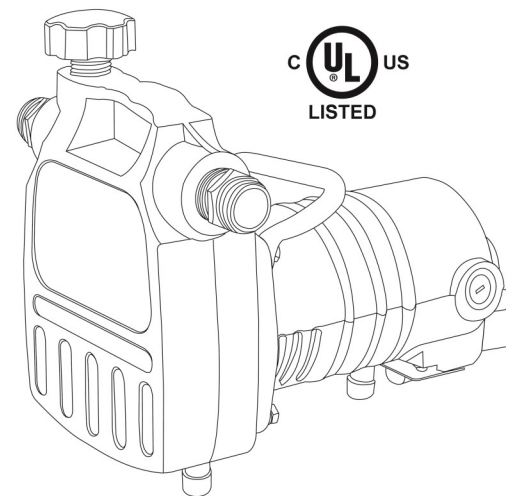

## Safety Guidelines

Carefully read, understand and follow all safety instructions in this manual.

 This is the safety alert symbol. When you see this symbol, look for one of the following signal words.

**⚠ DANGER** Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**⚠ CAUTION** Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**⚠ WARNING** Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

## Safety Information

Read these warnings carefully. Know the application and limitations of this pump. Failure to follow these warnings could result in serious bodily injury and/or property damage.

**⚠ DANGER** This pump is not submersible. Do not submerge the motor in water or expose to water. Personal injury and/or death could result from electric shock.

**⚠ DANGER** Do not use to pump flammable or explosive liquids such as gasoline, kerosene, fuel oil, etc. Personal injury and / or death could result. Do not use this pump in a flammable or explosive environment.

**⚠ CAUTION** This pump is intended to pump clear water only. It can be used to add propylene glycol to radiant heating lines but has not been investigated for pumping chemicals.

**⚠ DANGER** RISK OF ELECTRICAL SHOCK. This pump is supplied with a grounding conductor and grounding type attachment plug. To reduce the risk of electric shock, be certain that it is connected only to a properly grounded, grounding type receptacle. For added safety, it is highly recommended to connect this pump to a GFCI (Ground Fault Circuit Interrupter) outlet. Never remove the grounding blade from the plug.

**⚠ WARNING** RISK OF ELECTRICAL SHOCK. This pump has not been investigated for use in swimming pool or marine areas.

**⚠ DANGER** Do not touch this pump while standing in or walking on wet surfaces until all power is turned off. Failure to follow this warning could result in electric shock.

**⚠ CAUTION** RISK OF ELECTRICAL SHOCK. Do not use the power cord to carry or lift the pump. Doing so may cause the wire insulation to be exposed. Protect the cord from sharp objects, hot surfaces, oil and chemicals. Use the handle supplied with the pump for installing and transporting.

**⚠ CAUTION** Do not run the pump dry. This pump relies on water for cooling. Running the pump dry can cause the pump to overheat and the possibility of burns to anyone that handles the pump. Running the pump dry will void the warranty.

### LIMITED WARRANTY - TRANSFER PUMPS:

Manufacturer warrants the products specified in this warranty to be free from defects in material or workmanship for one (1) year from date of purchase. During the time period and subject to the terms and conditions, the manufacturer will repair or replace to the original user or consumer any portion of this product which proves to be defective due to materials or workmanship. At all times the manufacturer shall have and possess the sole right and option to determine whether to repair or replace defective equipment, parts, or components. The manufacturer has the option to inspect any product returned under warranty to confirm that the warranty applies before repair or replacement under warranty is approved. This warranty sets forth the manufacturer's sole obligation and purchaser's exclusive remedy for defective product. Return defective product to the place of purchase for warranty consideration.

### WARRANTY PERIOD - PRODUCTS:

If, within the duration of product use by the original user, this product proves to be defective due to materials or workmanship, the product shall be repaired or replaced at the manufacturer's option, subject to the terms and conditions set forth in this warranty statement. Proof of purchase is required for warranty consideration. In the absence of suitable proof of the purchase date, the effective period of this warranty is 12 months from the product's date of manufacture.

### LABOR, ETC. COSTS:

The manufacturer shall IN NO EVENT be responsible or liable for the cost of field labor or other charges incurred by any customer in removing and/or affixing any product, part, or component thereof.

### PRODUCT IMPROVEMENTS:

The manufacturer reserves the right to change or improve its products or any portions thereof without being obligated to provide such a change or improvement for units sold and/or shipped prior to such change or improvement.

### GENERAL TERMS AND CONDITIONS:

This warranty shall not apply to damage due to acts of God, normal wear and tear, normal maintenance services and the parts used in connection with such service, lightning or conditions beyond the control of the manufacturer, nor shall it apply to products which, in the sole judgment of the manufacturer, have been subject to negligence, abuse, accident, misapplication, tampering, alteration; nor due to improper installation, operation, maintenance or storage; nor to excess of recommended maximums as set forth in the instructions. Warranty will be VOID if any of the following conditions are found:

1. Product is used for purposes other than those for which it was designed and manufactured
2. Product not installed in accordance with applicable codes, ordinances, and good trade practices
3. Product connected to voltage other than indicated on nameplate or labels
4. Pump exposed to but not limited to the following: sand, gravel, cement, grease, plaster, mud, tar, oil, gasoline, solvents or other abrasive or corrosive substances
5. Pump has been used for pumping liquids above 120°F
6. Pump allowed to operate dry (liquid supply cut off)

### DISCLAIMER:

Any oral statements about the product made by the seller, the manufacturer, the representatives, or any other parties do not constitute warranties, shall not be relied upon by the user, and are not part of the contract for sale. Seller's and the manufacturers only obligation, and buyer's only remedy, shall be the replacement and/or repair by the manufacturer of the product as described above. NEITHER SELLER NOR THE MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR LOST PROFITS, LOST SALES, INJURY TO PERSON OR PROPERTY, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL LOSS), ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT, AND THE USER AGREES THAT NO OTHER REMEDY SHALL BE AVAILABLE TO IT. Before using, the user shall determine the suitability of the product for his/her intended use, and user assumes all risk and liability whatsoever in connection therewith.

THE WARRANTY AND REMEDY DESCRIBED IN THIS LIMITED WARRANTY IS AN EXCLUSIVE WARRANTY AND REMEDY AND IS IN LIEU OF ANY OTHER WARRANTY OR REMEDY, EXPRESSED OR IMPLIED, WHICH OTHER WARRANTIES AND REMEDIES ARE HEREBY EXPRESSLY EXCLUDED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT EITHER APPLIES TO A PRODUCT SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES GIVEN ABOVE.

Some states and countries do not allow the exclusion or limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

[illegible]

- ⚠ WARNING** Do not use this pump for potable/drinking water. Use only in applications for which the pump is designed for.
- ⚠ WARNING** According to the state of California (Prop 65), this product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.
- ⚠ CAUTION** DO NOT UNDER ANY CIRCUMSTANCES REMOVE THE GROUND PIN. The 3-prong plug must be inserted into a mating 3-prong grounded receptacle. If the installation does not have such a receptacle, it must be changed to the proper type, wired and grounded in accordance with the National Electrical Code and all applicable local codes and ordinances.
- ⚠ CAUTION** All wiring must be performed by a qualified electrician.
- ⚠ WARNING** Keep hands clear of suction & discharge openings. To prevent injury, never insert fingers into pump while it is plugged in.
- ⚠ CAUTION** This pump motor is equipped with an automatic resetting thermal protector and may restart unexpectedly.
- ⚠ WARNING** Drain excess water from the pump housing in freezing temperatures to avoid damage to the pump.
- ⚠ WARNING** This pump is not recommended to be used as a sprinkler pump.

| Model                    | 92260                                      |
|--------------------------|--------------------------------------------|
| HP                       | 1/2                                        |
| Volts                    | 120 volt AC                                |
| Amps                     | 8.4 Amps                                   |
| Hz                       | 60 Hz                                      |
| Phase                    | 1                                          |
| Discharge Size           | 3/4" NPT or 3/4" GHT with included adapter |
| Max. Solids Handling     | 1/4"                                       |
| Liquid Temperature Range | 32°F - 140°F                               |
| Cord Length              | 25'                                        |
| Pump Construction        | Cast Iron                                  |
| Impeller                 | Thermoplastic                              |
| Motor Shaft              | Cold Rolled Steel                          |
| Shaft Seal               | Carbon/Ceramic                             |
| Shut off head            | 120'                                       |
| Max. PSI                 | 52 psi                                     |

Installation

**⚠ DANGER** Always disconnect the power source before attempting to install, service or perform maintenance. If the power source is out of sight, lock and tag in the off position to prevent unintended power application. Failure to do so could result in fatal electric shock. All wiring should be performed by a qualified electrician.


PIPING

- 1. The inlet and discharge ports are 3/4" female NPT. Standard water pipe can be threaded into the pump housing. If a garden hose is to be used, thread the adapters (included) into the housing. See Figure 1. It is recommended to use thread seal tape or pipe joint compound on the threads to ensure a tight seal. **NOTE:** Standard garden hose may collapse under suction pressure. To reduce the possibility of hose collapse, use a reinforced hose on the suction line such as PVC, plastic or galvanized pipe.
- 2. The maximum suction lift of the pump is 15 feet. Install a foot valve (sold separately) when the suction lift is over 10 feet.
- 3. Use the included strainer on the suction line when pumping from a pond or stream to prevent foreign objects from entering the pump housing.

PRIMING

**⚠ CAUTION** Do not run the pump dry. The pump housing must be filled with water before operating. Running the pump dry will cause damage to the shaft seal and result in premature failure of the pump. Running the pump dry will void the warranty.


- 1. Remove the priming plug on top of the pump housing. See Figure 1.
- 2. Fill the pump with clean water until it reaches the top of the housing.
- 3. Replace and re-tighten the priming plug.

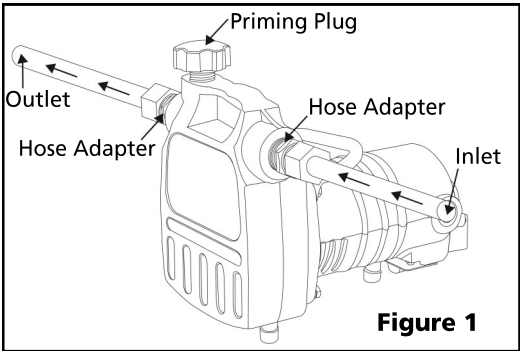

Operation

- 1. Once the pump is filled with water, plug the power cord into a grounded outlet. The use of a GFCI outlet is highly recommended. It is recommended to plug the cord directly into the outlet. The use of an extension cord is not recommended.
- 2. The pump should prime within a minute of starting depending on the length of suction hose.
- 3. When finished pumping unplug the cord to turn the unit off.

Replacement Parts

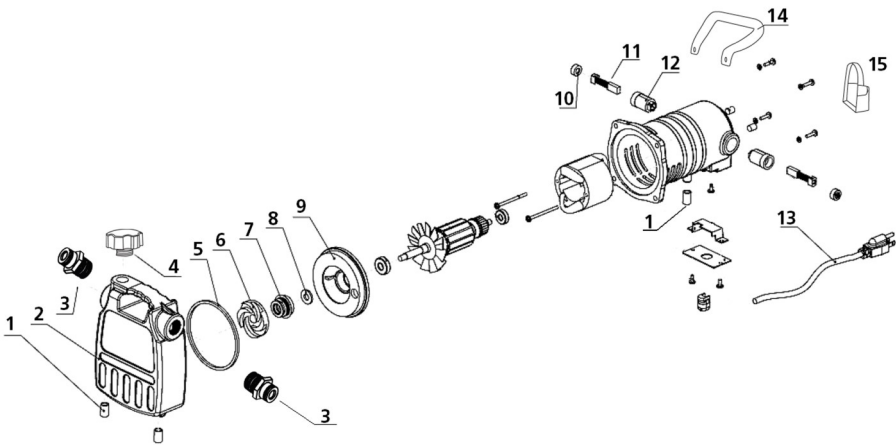

| Ref# | Description                 | Part # |
|------|-----------------------------|--------|
| 1    | Rubber Bumper               | 99670  |
| 2    | Volute                      | 99671  |
| 3    | 3/4" NPT x 3/4" GHT Adapter | 99672  |
| 4    | Priming Plug                | 99683  |
| 5    | Gasket                      | 99674  |
| 6    | Impeller                    | 99675  |
| 7    | Shaft Seal                  | 99676  |
| 8    | Washer                      | 99677  |
| 9    | Seal Plate                  | 99678  |
| 10   | Brush Cap                   | 99679  |
| 11   | Brush                       | 99680  |
| 12   | Brush Holder                | 99681  |
| 13   | Power Cord                  | 99682  |
| 14   | Carrying Handle             | 99684  |
| 15   | Motor Cover                 | 99685  |

## Troubleshooting

| PROBLEM                                       | POSSIBLE CAUSES                                                          | HOW TO CORRECT                                                     |
|-----------------------------------------------|--------------------------------------------------------------------------|--------------------------------------------------------------------|
| If the pump does not start or run             | Pump is not plugged in, switch or breaker is off                         | Plug pump in or turn on switch/breaker                             |
|                                               | Check for blown fuses, tripped circuit breakers or tripped GFCI outlets. | Replace fuse, reset breaker, reset GFCI outlet                     |
|                                               | Low line voltage                                                         | Check voltage & wire size and increase if necessary                |
|                                               | Obstructed impeller                                                      | Check and remove obstruction                                       |
|                                               | Worn brushes                                                             | Replace Brushes                                                    |
| Pump will not prime or retain prime           | Air leak in suction line                                                 | Check for leaks. Use thread sealant on fittings if necessary       |
|                                               | Worn seal/gasket                                                         | Inspect and replace if necessary                                   |
|                                               | Suction lift too high                                                    | Lower pump closer to water source                                  |
| If the pump runs but moves little or no water | Clogged intake screen                                                    | Clean or replace screen                                            |
|                                               | Clogged or kinked discharge hose pipe                                    | Remove kink or clog                                                |
|                                               | Frozen discharge hose/pipe                                               | Allow hose/pipe to thaw                                            |
|                                               | Air leak in suction line                                                 | Check for leaks. Use thread sealant if necessary                   |
|                                               | Low line voltage                                                         | Check wire size and increase if necessary                          |
|                                               | Worn, damaged or clogged pump parts                                      | Inspect for wear, damage or clog and clean or replace if necessary |
|                                               | Discharge or suction lift exceeds pump capacity                          | Lower pump closer to water source and/or decrease discharge height |
|                                               | Suction end of hose out of water                                         | Submerge suction line in water.                                    |
| Pump Leaks                                    | Worn shaft seal                                                          | Inspect and replace if necessary                                   |
|                                               | Worn housing gasket                                                      | Inspect and replace if necessary                                   |

## Operation (Continued)

- When finished pumping unplug the cord to turn the unit off.
- Drain excess water from the pump housing after each use.

**⚠ CAUTION** *The pump retains water in the housing after use. In areas that are prone to freezing, be sure to drain the pump before storage to prevent damage from freezing water.*

### Maintenance


**⚠ DANGER** *Always disconnect the power source before attempting to install, service or perform maintenance. If the power source is out of sight, lock and tag in the off position to prevent unintended power application. Failure to do so could result in fatal electric shock.*

**⚠ WARNING** *Allow the pump to cool before servicing. The motor may be extremely hot and could result in personal injury.*

### BRUSH INSPECTION AND REPLACEMENT

**NOTICE** Brushes should be inspected after each 100 hours of use. Pumps with 100 hours or more of operation may stop operating or fail to start. This could be due to worn brushes or carbon build up. The brushes should be removed and cleaned of carbon. **NOTE:** If brushes are to be reused, mark the location of each brush (left & right) and reinstall on the same side. Brushes are a normal wear item and not covered under warranty. An extra set of brushes are included with this pump. If additional replacement brushes are required, call 1-800-495-9278 to order. Brush replacement should be scheduled after approximately 300 hours of use.

- Unplug power cord from outlet.
- Remove brush access caps with a screwdriver. See Figure 2.
- Remove old brushes. Take note of brush orientation.
- Insert new brush assembly into brush holder
- Replace brush caps.

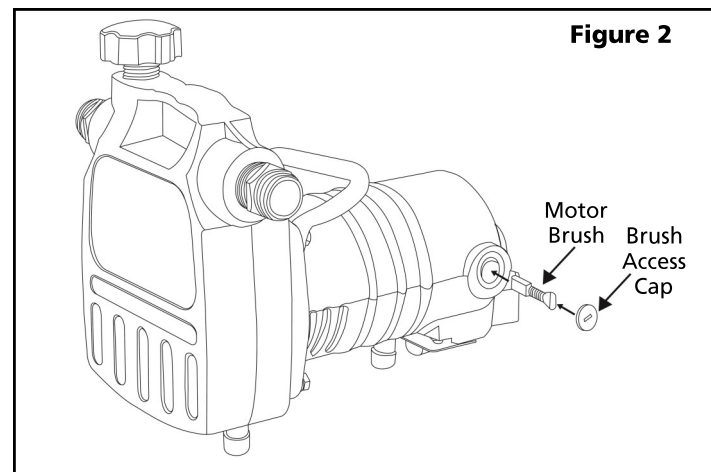

**Figure 2**

## Maintenance (continued)

### IMPELLER / SHAFT SEAL REPLACEMENT

1. Unplug the power cord from the outlet
2. Disconnect suction and discharge lines
3. Empty water from pump housing.
4. Remove the brushes per "BRUSH INSPECTION AND REPLACEMENT" instructions.
5. Remove the four bolts holding the motor to the pump housing. Remove pump housing from motor. Gently tap the housing with a rubber mallet if necessary.
6. The entire motor commutator (rotor) can now be removed. Using a screwdriver, gently pry the seal plate from the motor housing. The entire commutator should come out of the motor housing.
7. To remove the impeller, hold the commutator and turn the impeller counter clockwise (right hand thread).
8. To replace the shaft seal, gently pry the seal from the seal plate using a screwdriver. Avoid touching or scratching the polished surface of the seal. Dirt, grit or oil may cause premature failure of the seal.
9. Using a screwdriver, gently pry the ceramic half of the seal out of the impeller. Avoid touching or scratching the polished ceramic surface of the seal. Dirt, grit or oil may cause premature failure of the seal.
10. Installation is in reverse order starting with step 7.


### Storage

1. Be certain to drain all water from pump housing before storage. If necessary, place a small amount of RTV antifreeze in the pump housing to protect from freezing and corrosion
2. Store indoors in a dry environment.

## Performances

### NOTICE

Height and/or piping restriction will reduce the pump output performance. It is recommended to use the same size or larger pipe as the pump discharge for optimum performance.

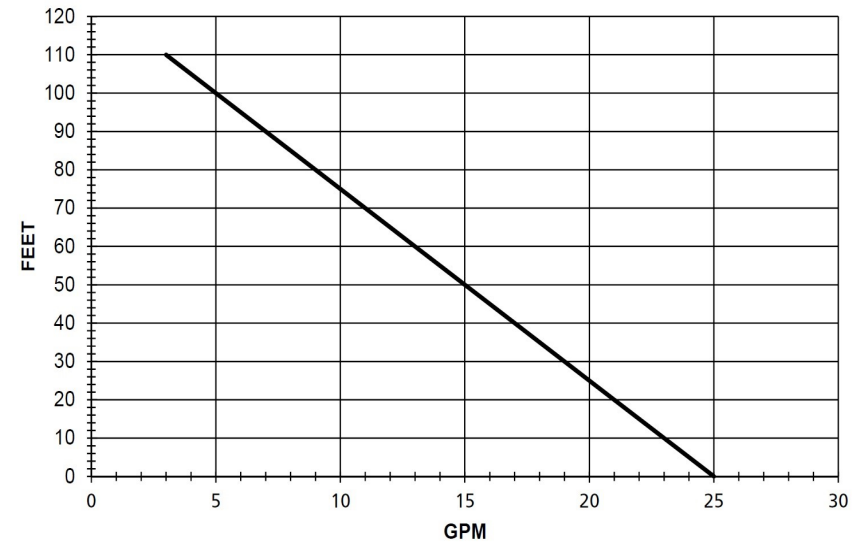

| Discharge Height   | 0'   | 30'  | 60' | 90' | 110' |
|--------------------|------|------|-----|-----|------|
| Gallons Per Minute | 25   | 19   | 13  | 7   | 3    |
| Gallons Per Hour   | 1500 | 1140 | 780 | 420 | 180  |

| Discharge Pressure | 0 psi | 10 psi | 20 psi | 30 psi | 40 psi |
|--------------------|-------|--------|--------|--------|--------|
| GPH at 0 Feet      | 1500  | 1370   | 1140   | 890    | 610    |
| GPH at 5 Feet      | 1420  | 1300   | 1070   | 820    | 540    |
| GPH at 10 Feet     | 1350  | 1190   | 1000   | 750    | 480    |